


# GWYN LEWIS 4X4 PRODUCTS<sup>®</sup>

200 TDI Discovery/RRC engine twin alternator mount

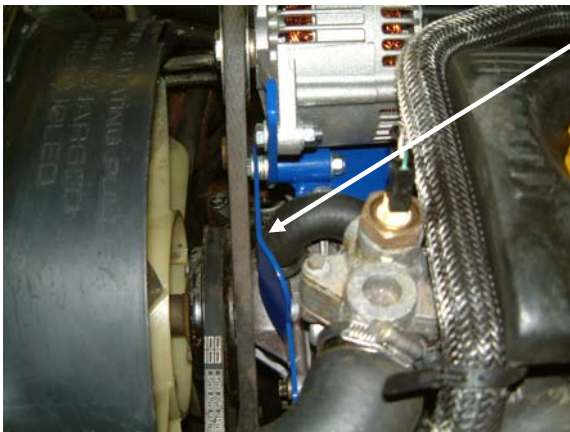

M8 spacer washers may need to be fitted here to space the guard off the water hose.



Make sure that the fan belt does not rub the water hose guard.



A earth wire must be attached from the alternators body to the engine. A minimum 25mm square cable is required.

These air con tensioners and pulleys will be required if you haven't got them fitted to you engine already.

