


WIRING DIAGRAM FOR SEPERATE CHARGING SYSTEM ON VEHICLES WITH A SECOND ALTERNATOR AND SECOND BATTERY

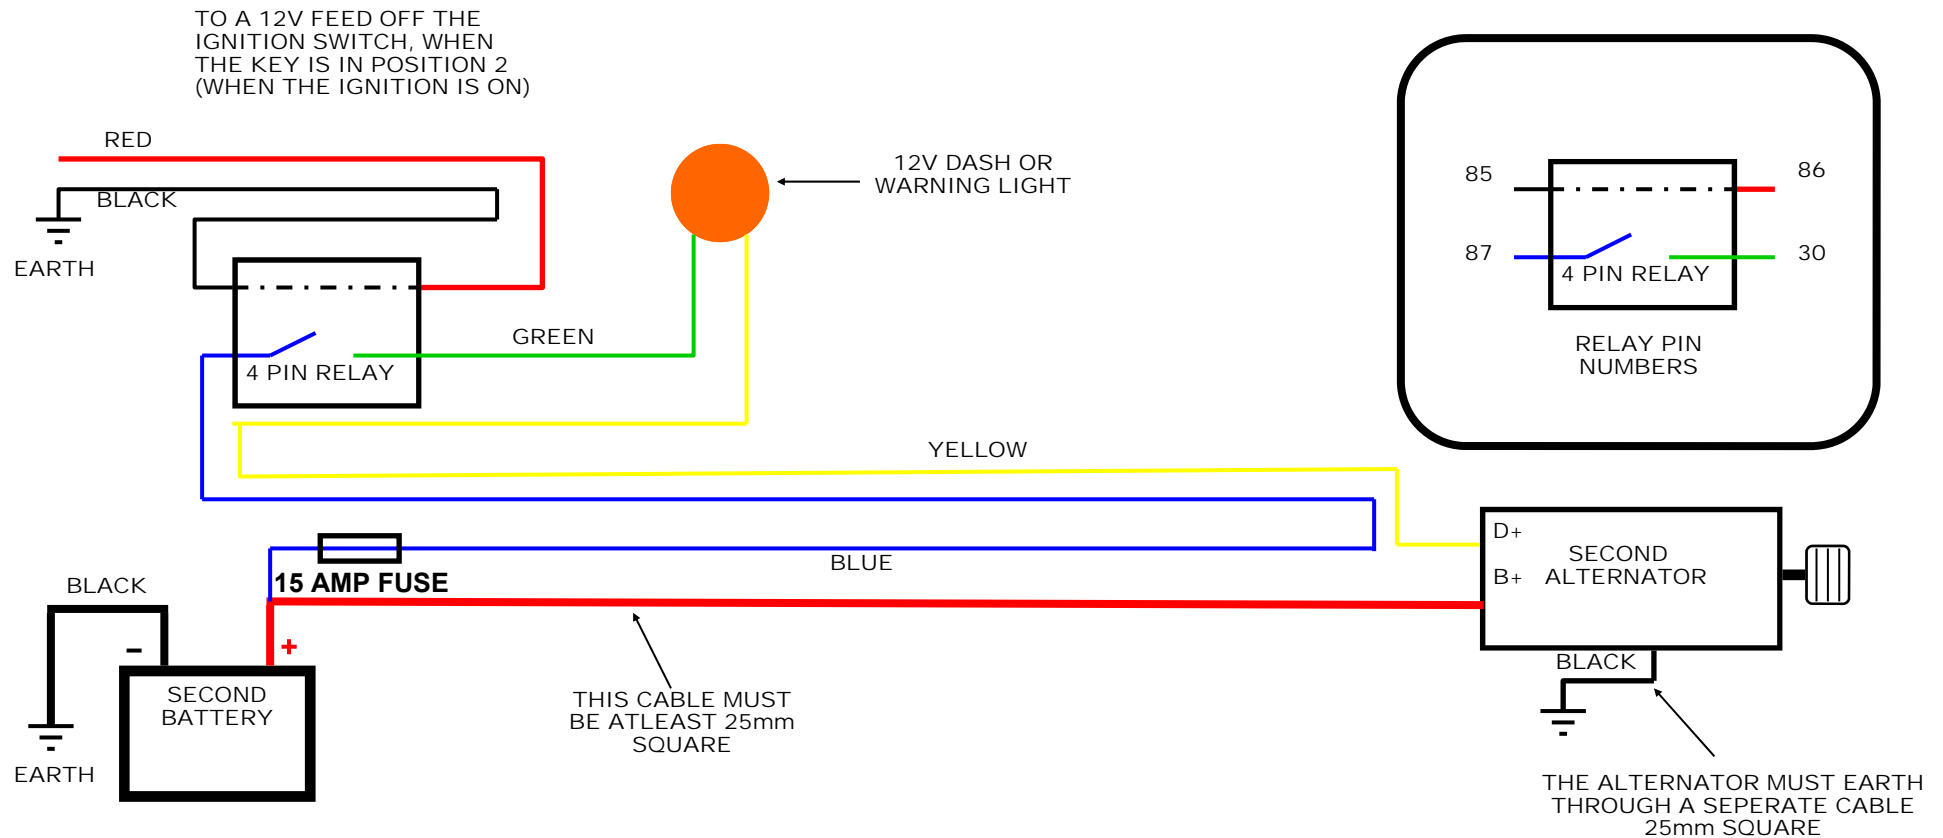

You must fit a separate earth cable from the alternator body to the engine block. This is very important to get maximum charge out of your alternator.