



V8 3.9 EFI TWIN ALTERNATOR MOUNT SERPENTINE BELT

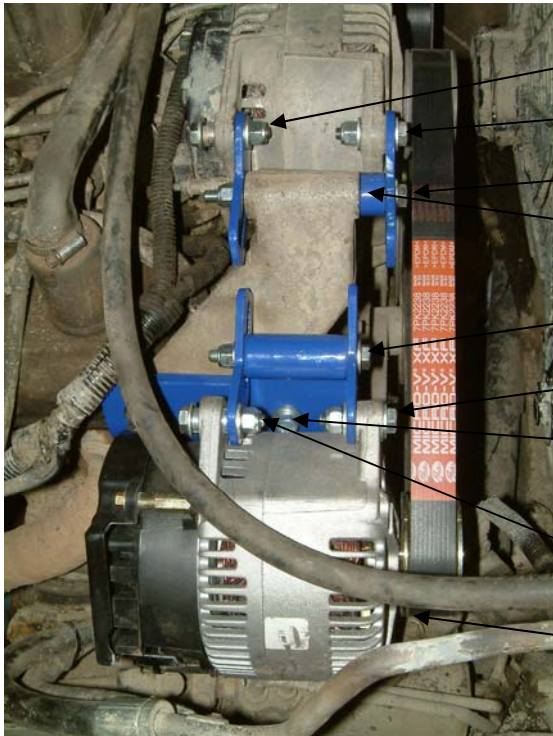

- M8X40 Bolt/Nut + 2 washers
- M8X35 Bolt/Nut + 2 washers
- M8X110 Bolt/Nut + 2 washers
- 15mm Spacer
- M8X85 Bolt/Nut + 2 washers
- M8X35 Bolt/Nut + 2 washers
- 4 X M8X35
4 X M8 Spring washers
4 X Flat washers
- M8X40 Bolt/Nut + 2 washers
- M8X120 Bolt/Nut + 2 washers

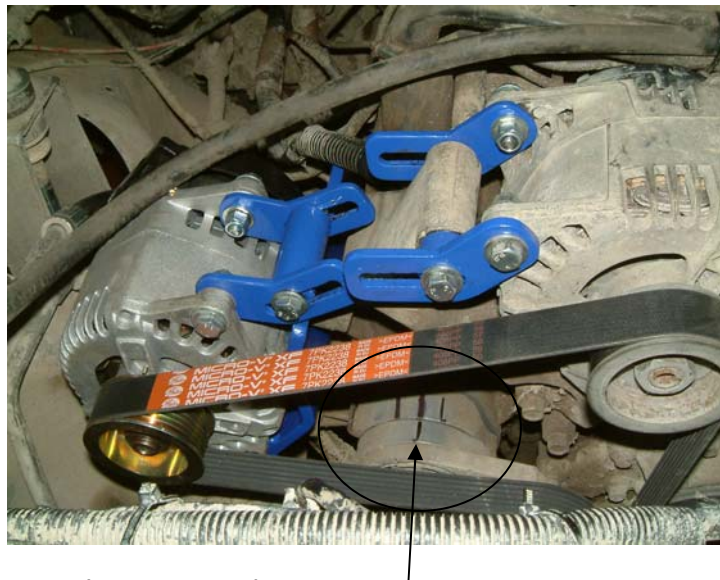

Air con tensioner (ERR3440) must be used. Both alternators can be adjusted to make sure the belt tensioner is at the centre of its travel. You must fit a separate EARTH CABLE from the alternator body to the engine block. This is very important to get maximum charge out of your alternator.