



GWYN LEWIS 4x4 PRODUCTS[®]

200 TDI Discovery/RRC engine twin alternator mount

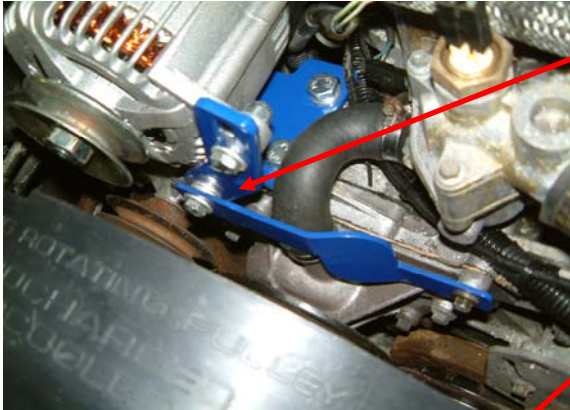


M8 spacer washers may need to be fitted here to space the guard off the water hose.

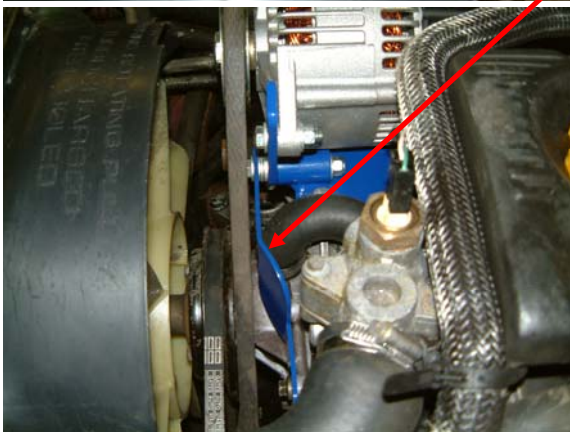

Make sure that the fan belt does not rub the water hose guard.



These air con tensioners and pulleys will be required if you haven't got them fitted to your engine

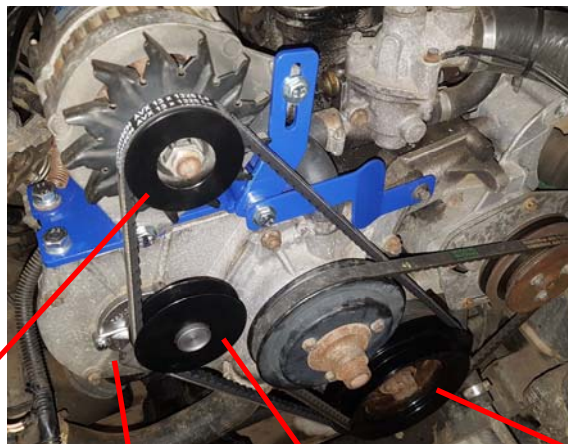

An earth wire must be attached from the alternators body to the engine. A minimum 25mm square cable is required



GL1147-KIT
Alternator
V Groove
Pulley



ETC8853-KIT
Air Con
Tensioner
Mount



614718
Air Con
Tensioner



ERR2352
2V Groove Crank
Pulley