


## GL1202, Discovery 2 Track Rod Guard

1.

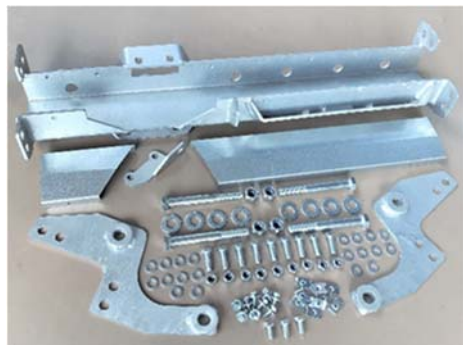


Discovery 2 Track Rod Guard full kit

2.



Firstly, fit both side brackets, as pictures with the new bolts supplied.

3.

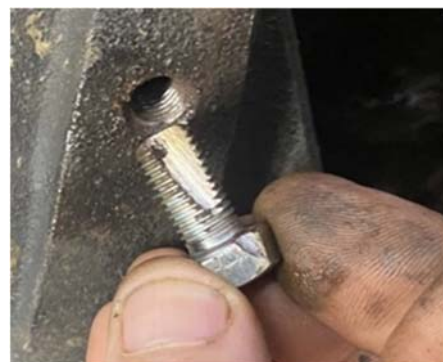

You may need to clean out the threads in your diff. To do this we have supplied one extra bolt in the kit. You can grind or file a slot in the bolt, this will act like a tap to clean out the threads.

4.




Loosely fit the front support bracket to the diff.

5.



Fit track rod guard as shown in picture.  
After tightening up the bolts you need to make sure nothing rubs from lock to lock.

6.

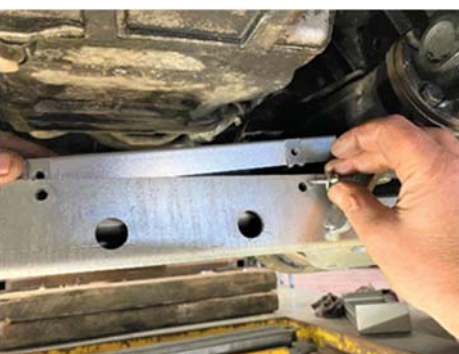

Lastly, you will be supplied with two lids to fit on top of the track rod guard. Fit all U nuts to the both lids and fit the lids to the track rod guard with the speed screws as shown on picture.