


## GL1022, Defender Front Wing, Bumper Mud Shields



Fitting is all done/shown on the Right Hand Side of the vehicle, (UK Driver Side).

Make sure to remove protecting film from both mud shields. Protective film side points forward. Firstly, fit brackets **A** and **C** to shields with M6x16 bolts, 4 x 19mm washers and nuts. Bracket **A** goes to the outer side. Bracket **C** goes to the chassis side, as shown in the picture.

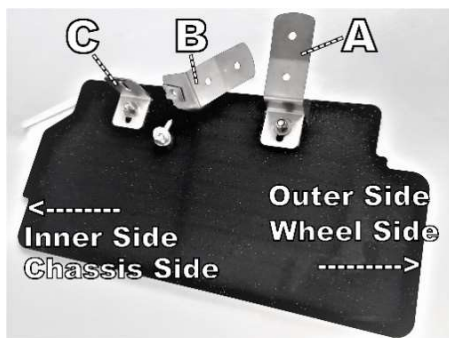

Remove the two inner wings self tapping screws on your Defender. Fit the U nut to bracket **B**, as shown on picture.

Slide bracket **B** up between the inner wing and front wing bracket on the chassis side.

Use the supplied speed screws and 25mm washers to secure the bracket.



Slide the shields up between the inner wing and front wing, align bracket **A** with the hole and fit the speed screw and 25mm washer.

Lastly, you need to fit bracket **C** to bracket **B**, using the speed screw and 19mm washer.

Once all is fitted you can adjust the shields in all directions to fit square with wing and bumper. Once happy with the position tighten all screws and bolts.

We would recommend for our customers to use grease when fitting our mud shield kits. Make sure to grease all brackets and fittings to help prevent corrosion. Stainless Steel fittings will need greasing. For our recommendation in grease use Morris K48 Moly Grease, this can be found on our website – GL1163.